MMusbVNC2

User's Manual

REV 1.0

Many ideas one solution

Introduction

Thank You for buying our minimodule MMusbVNC2.

MMusbVNC2 is low-cost integrated Host USB module. It is based on FTDI's VNC2-48L1B device. Module allow communicate to MCU, PLD or FPGA via one of the three interfaces: UART, SPI and parallel FIFO. Interface selecting is possible by two shorts: SEL1 and SEL2. VNC2-48L1B chip, chich is a hart of our module, transparently handles the FAT File structure and is fully compliant with USB 2.0 specification. Our module is delivered with VDAP firmware installed, which allow to communication with so popularly USB Flash drives.

MMusbVNC2 is made in two-layer printed circuit bard technology. It Has 256k byte program Flash ROM memory and 16k byte SRAM data memory. All signals are driver via 24 pin, 1.1inch wide footprint. Integral power control allow to power external devices.

Choosing our minimodule is the first step for projects, which should be done in the short time. **MMusbVNC2** could be used as part of prototype eliminating necessity of designing circuit board and final circuit in which module is fitted like "sandwich shape".

We wish you were successful at designing and using new devices

Features MMusbVNC2

- Low dimension, USB type A socjet and second USB port available by module pins.
- Fully compliant with USB 2.0 specifi cation – USB full speed (12 Mbps) and low speed (1.5 Mbps) USB host and slave device compatible.
- Single 5V Power Supply
- Integral power control allow to power external devices by 3.3V power supply form LP2951ACM-3.3
- Power indicator (PWR) and USB traffic indicatros LED’s (LED1, LED2).

Power On	LED1 and LED2 flash alternately for 2 seconds. Repeated until monitor connects.
USB Disk Initialisation	LED1 on, LED2 off
USB Disk Ready	LED1 off, LED2 on
USB Disk Removed	LED1 off, LED2 off
Commands from monitor to USB Disk	LED1 off, LED2 flashes
Commands from monitor Port with USB Disk removed	LED1 off, LED2 off

- Firmware programming control pins PG# and RS# brought out onto jumper pin connectors.
- Program or update firmware via USB Flash dis kor via SPI / UART / Paralel FIFO

Interface	SEL1	SEL2
UART	Pull-up	Pull-up
SPI	Pull-down	Pull-up
Parallel FIFO	Pull-up	Pull-down
UART	Pull-down	Pull-down

Applications Areas

- Interface USB Flash drive to MCU / PLD / FPGA
- USB Flash drive to USB Flash drive file transfer interface
- Digital camera to USB Flash drive or other USB slave device interface
- MP3 Player to USB Flash drive or other USB slave device interface
- USB MP3 Player to USB MP3 Player
- Mobile phone to USB Flash drive or other USB slave device interface
- GPS to mobile phone interface
- Interface USB Flash drive to Printer

General Description

MMusbVNC2 is a host / slave USB interface, which include new functionality. All signals are driver via 24 pin, 1.1inch wide footprint. Single USB port type A is available on module and second USB port type A is available by pins.

MMusbVNC2 allow to work with three interfaces, selectable by two gold-pin junction placed directly on minimodule:

- UART
- SPI
- Parallel FIFO

FTDI company is delivering with VNC2-48L1B chip, 6 different types of firmware, which are available on www.vinculum.com website. Upgrade or installation a new firmware is easy. It can by done by using software which is also available on product website and our else module, **MMusb232**. Connection schematic is available in second part of this manual.

Module Pin-Out

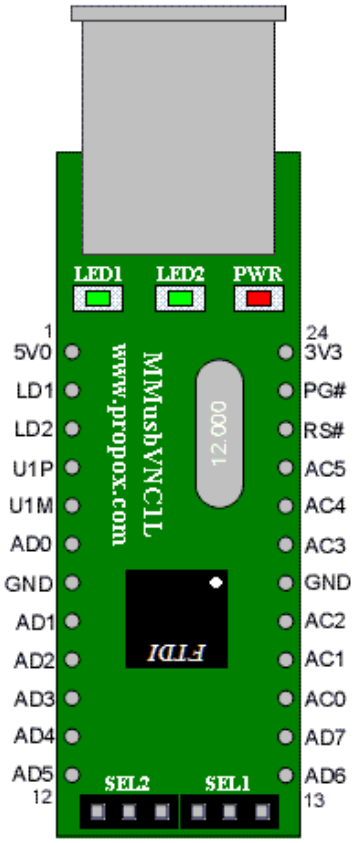

Figure 2. MusbVNC2 *Top view (component side)*

Pin Definitions determined by type of interface

Pin	Name	PCB	Type	UART	Parallel FIFO	SPI
6	ADBUS0	AD0	I/O	TxD	D0	SCLK
8	ADBUS1	AD1	I/O	RxD	D1	SDI
9	ADBUS2	AD2	I/O	RTS#	D2	SDO
10	ADBUS3	AD3	I/O	CTS#	D3	CS
11	ADBUS4	AD4	I/O	DTR#	D4	
12	ADBUS5	AD5	I/O	DSR#	D5	
13	ADBUS6	AD6	I/O	DCD#	D6	
14	ADBUS7	AD7	I/O	RI#	D7	
15	ACBUS0	AC0	I/O	TXDEN#	RXF#	
16	ACBUS1	AC1	I/O		TXE#	
17	ACBUS2	AC2	I/O		RD#	
19	ACBUS3	AC3	I/O		WR	
20	ACBUS4	AC4	I/O			

Pin Definitions

Pin No.	Name	Type	Description
1	*5V0*	*Input*	*5V module supply pin. Provides the 5V output on the USB type A socket, and the 3.3V supply, via an on-board LP2951PCM-3.3.*
2	*LD1*	*Output*	*USB Port 1 activity indicator LED. This pin is hard wired to a green LED1.*
3	*LD2*	*Output*	*USB Port 2 activity indicator LED. This pin is hard wired to a green LED2.*
4	*U1P*	*I/O*	*USB Data Signal Plus - USB host/slave port 1.*
5	*U1M*	*I/O*	*USB Data Signal Minus - USB host/slave port 1.*
6	*AD0*	*I/O*	*AD bit 0.*
7	*GND*	*GND*	*Ground supply pin.*
8	*AD1*	*I/O*	*AD bit 1.*
9	*AD2*	*I/O*	*AD bit 2.*
10	*AD3*	*I/O*	*AD bit 3.*
11	*AD4*	*I/O*	*AD bit 4.*
12	*AD5*	*I/O*	*AD bit 5.*
13	*AD6*	*I/O*	*AD bit 6.*
14	*AD7*	*I/O*	*AD bit 7.*
15	*AC0*	*I/O*	*AC bit 0.*
16	*AC1*	*I/O*	*AC bit 1.*
17	*AC2*	*I/O*	*AC bit 2.*
18	*GND*	*GND*	*Ground supply pin.*
19	*AC3*	*I/O*	*AC bit 3.*
20	*AC4*	*I/O*	*AC bit 4.*
21	*AC5*	*I/O*	*AC bit 5.*
22	*RS#*	*Input*	*Can be used by an external device to reset the module. It can be used with PROG# signal to program firmware.*
23	*PG#*	*Input*	*This pin is used with RESET# signal to program firmware.*
24	*3V3*	*Output*	*3.3V output from module's on board LP2951PCM-3.3.*

Technical Data

Dimensions : 60 x 18,8 x 18,8 mm
Weight : około 8 g
Power supply : 5V

Mechanical Dimensions

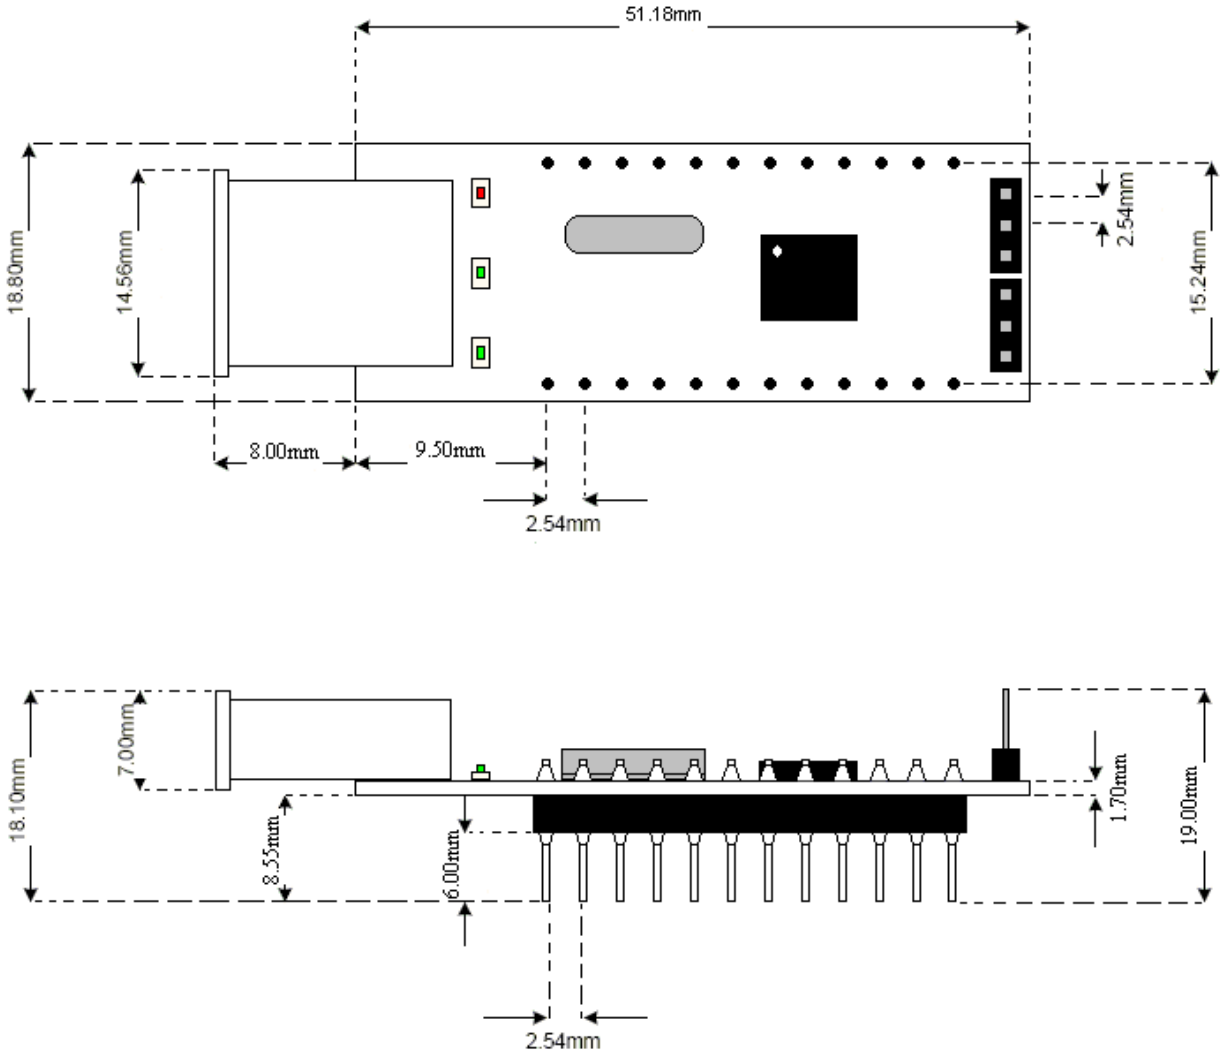

Dimensions are in millimeters.
1mils – 1/1000 inch
100miles = 2,54mm

Firmware update example

MMusbVNC2 is delivered with VDAP firmware installed. Full firmware's documentation is able on [product webside](). Below is placed sample connection schematic to minimodule [MMusb232](), which allow to install firmware by PC USB:

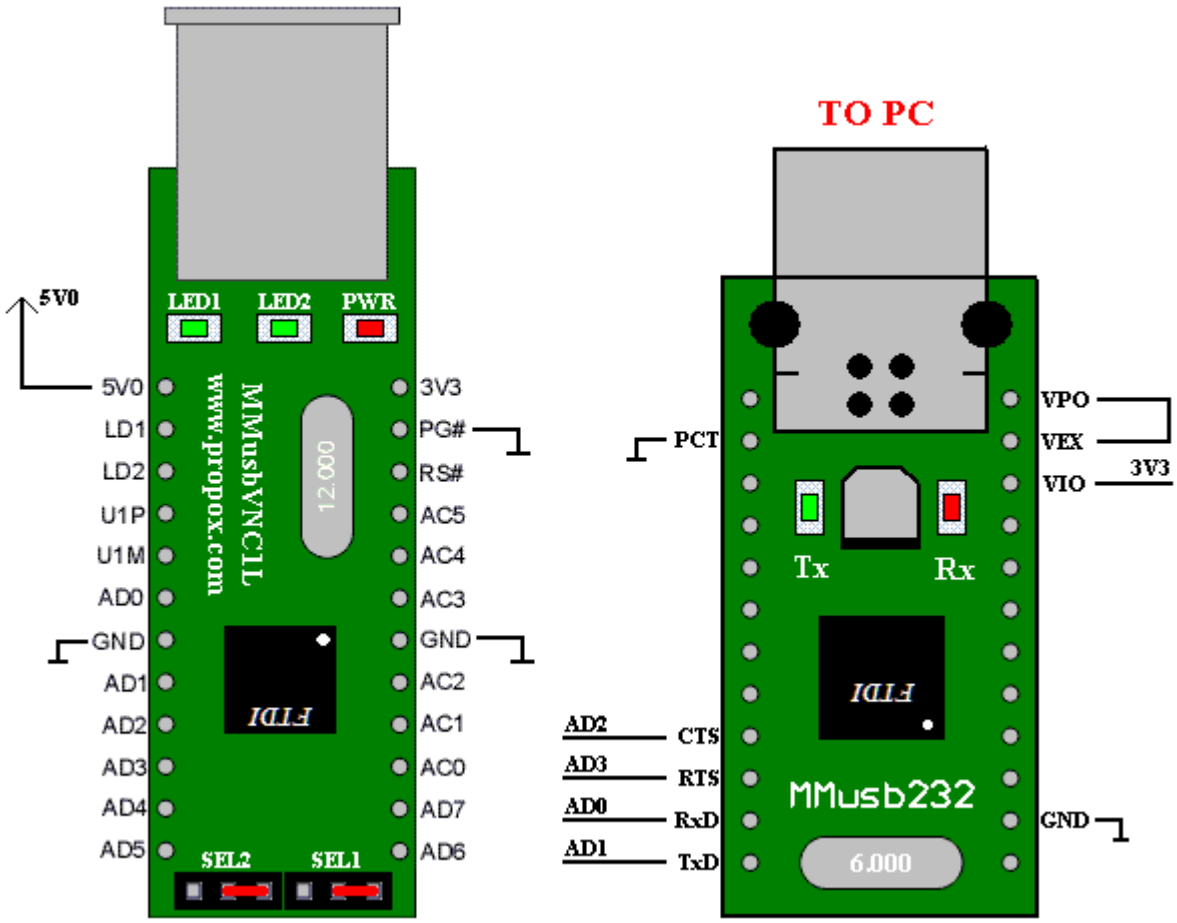

To enable the bootloader, the PG# pin must be driven low and the MMusbVNC2 must then be reset by driving the RS# pin low then high. Run mode can be enabled by driving the PROG# pin high and then resetting the VNC2 by driving the RESET# pin low then high.

Note that for the bootloader to be active PG# pin must be driven low before powering the VNC2. If the PG# pin is not driven low, the VNC2 will power up in run mode with the bootloader inactive.

Firmware dla układu VNC2-48L1B oraz Oprogramowanie

Vinculum II Firmware Flash Programming

Vinculum II Tools

Second USB port connection example

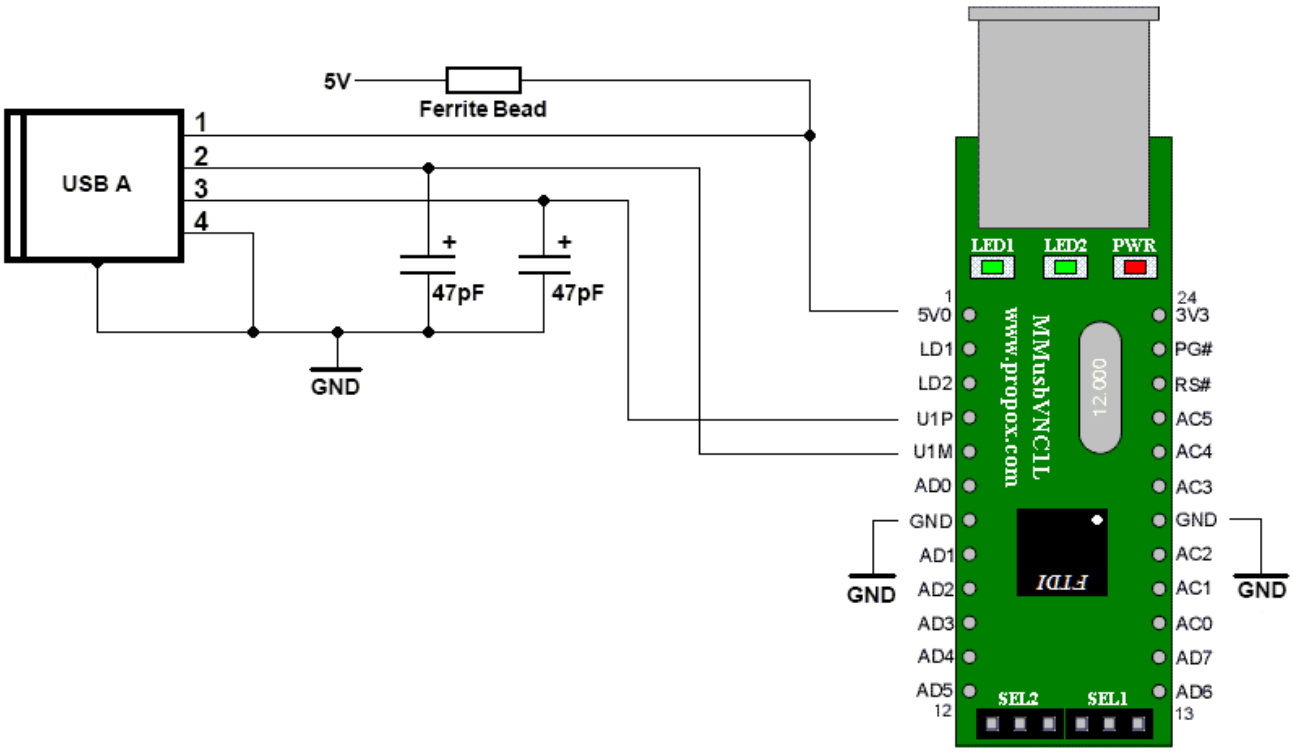

Technical Support

If You have a problem with MMusbVNC2, please contact us at support@propox.com.

Schematic

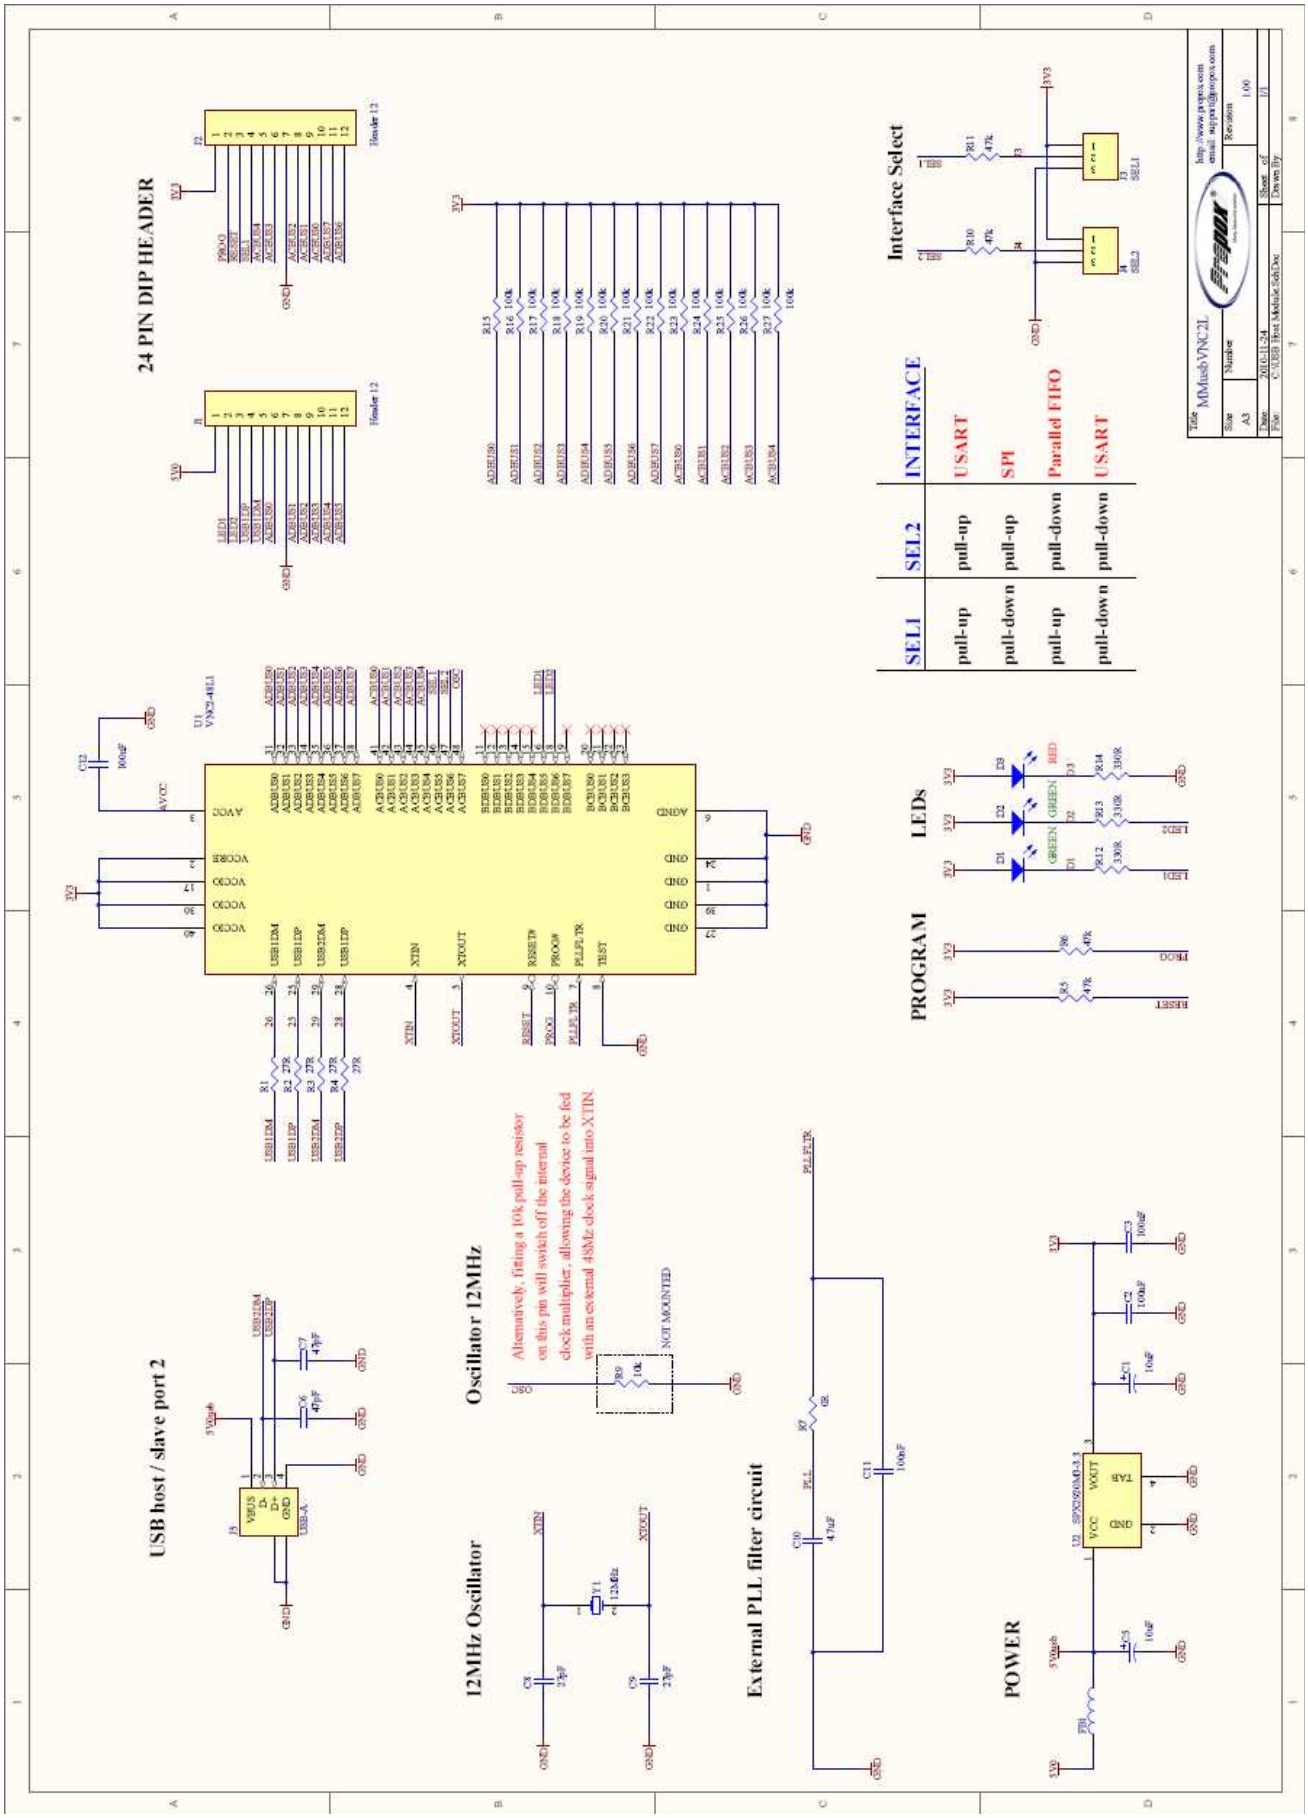
24 PIN DIP HEADER
Interface Select
SEL1 SEL2 INTERFACE
pull-up pull-up USART
pull-down pull-up SPI
pull-up pull-down Parallel FIFO
pull-down pull-down USART
LEDs
PROGRAM
USB host / slave port 2
Oscillator 12MHz
Alternatively, fitting a 10k pull-up resistor on this pin will switch off the internal clock multiplier, allowing the device to be fed with an external 48Mz clock signal into XTIN
NOT MOUNTED
12MHz Oscillator
External PLL filter circuit
POWER
MMusbVNC2L